

## INSTALLATION INSTRUCTIONS FOR MEPRO HYPER-BRIGHT™ FIXED SIGHTS GLOCK STD FRAME

17,17L,19,22,23,24,25,28,31,32,33,34,35,37,38,39,45  
ML-40214

### General Instructions

**WARNING:** This sight set contains a small quantity (54 millicuries or less) of radioactive tritium in gaseous form. No attempt must be made to disassemble the sights. If a sight is defective, please contact MEPROLIGHT®.

**WARNING:** Before starting, make sure the weapon is unloaded.

- Remove the slide assembly from the pistol. Follow the manufacturer's instructions for removal.
- Remove the old/stock sight/s from the slide in accordance with the manufacturer's standard procedures.
- If you are unsure about the removal or installation of the sights or do not have the proper tools, contact a qualified gunsmith to perform the work.

### Cleaning


- Use a suitable solvent (acetone or the like) to clean gun oil residue from all contacting surfaces of the rear/front sight and the slide assembly.

**CAUTION:** To prevent damage to non-metallic surfaces, do not use any cleaning solvents such as acetone on or around the sight dot area. Do not clean the sight with weapon lubricants or fuel. Do not immerse the sight in any fluid.


- Wipe all contacting surfaces clean and dry.

## FRONT SIGHT INSTALLATION

- Put a drop of LOCTITE® 609 Threadlocker onto the internal thread of the front sight.
- Put a drop of LOCTITE® 609 Threadlocker onto the thread of the sight retaining screw.

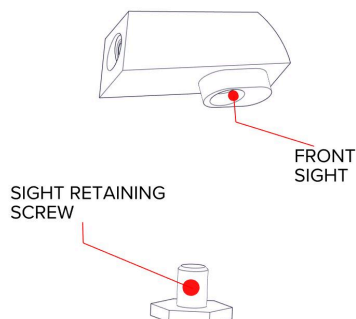


- Place the sight in its place on the slide.

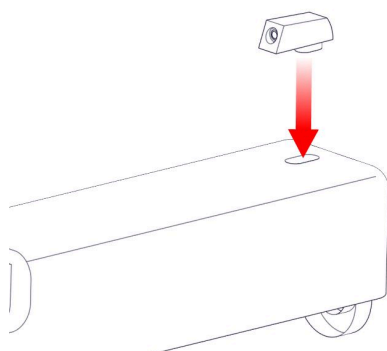

- Use the supplied screwdriver to install the mounting screw.


**NOTE:** Make sure that the installation procedure is made before the Threadlocker cures. After installation, allow a minimum of 8 hours for the thorough curing of the Threadlocker.

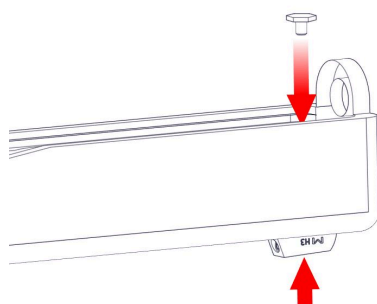

## REAR SIGHT INSTALLATION

- Apply LOCTITE® 609 Threadlocker on both angled surfaces of the sight's dovetail.
- Apply LOCTITE® 609 Threadlocker on both angled surfaces of the slide's dovetail recess.

- Fit the rear sight into the slide. Use a sight-pusher if required. Position the sight in a centered position.

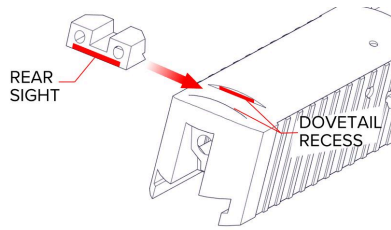

**NOTE:** Make sure that the installation procedure is made before the Threadlocker cures. After installation, allow a minimum of 8 hours for the thorough curing of the Threadlocker.

---

## Care and Maintenance

Before shooting, make sure the aiming dot/s are clean. If necessary, wipe with a clean, dry cloth of soft cotton, rice paper or lens tissue.

**NOTE:** Do not use clothing fabric or other rough materials for cleaning.